


Step 1
Insert latch in door as shown in diagram. Make sure arrow is pointing up.

NOTE: Make sure you install new Strike Plate on door frame and cut hole appropriately. It may be necessary to enlarge existing hole.

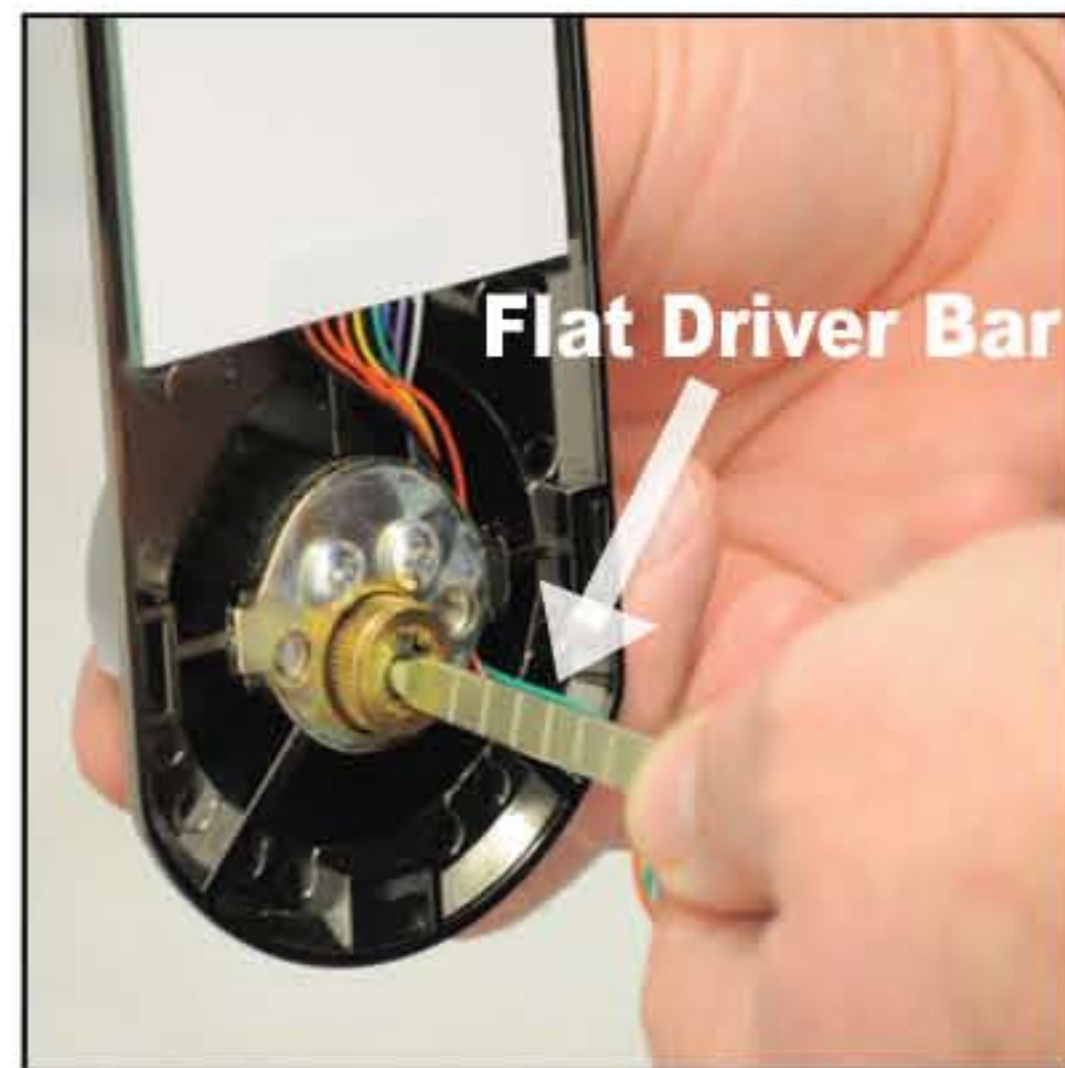

Step 2
Prepare Front Assembly for mounting as follows:


- a. insure key is removed.
- b. unlock Front Assembly by putting Flat Driver Bar in the vertical position. (see diagram)



Step 3
Mount Front Assembly on door, routing wire loom UNDER latch.



Step 4
Install Back Mounting Plate & route wire loom through bottom hole.

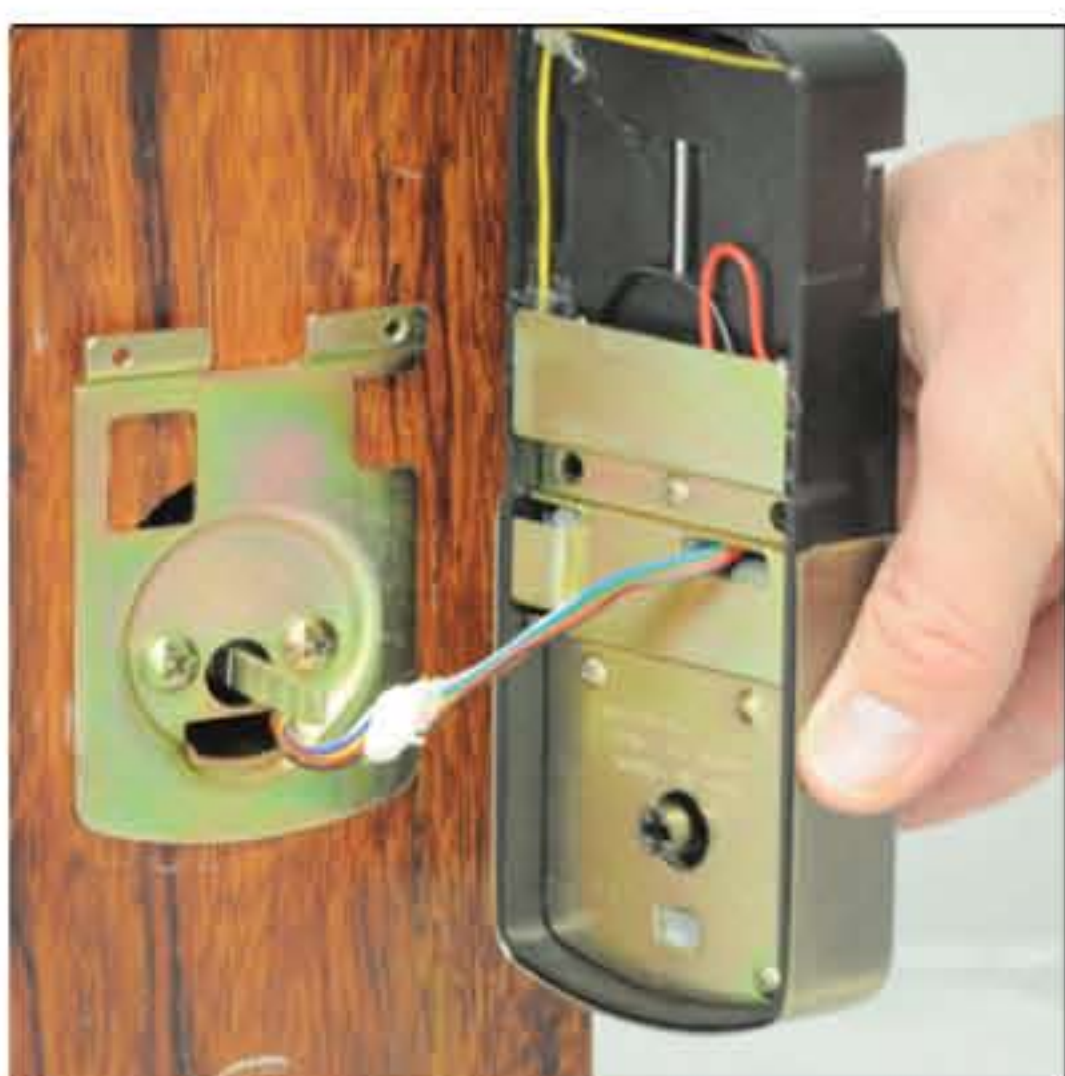

Step 5
Connect wire loom from Front Assembly to Back Module & remove battery cover. *See Note



Step 6
Fasten Back Module to the Back Mounting Plate. **DO NOT OVER TIGHTEN. Install premium alkaline batteries.**



Step 7
Replace Back Module Cover.

* Latch and Back Thumb Turn should be in unlocked position. (top of Thumb Turn is pointing away from latch)