



**1**  
 Remove old showerhead from wall by carefully unscrewing from back pipe.



**2a** Long Extender - 2 1/2"



**2b** Short Extender - 1 1/2"

Inlet Pipe extender must protrude at least 5/8" to 1 1/4". Use appropriate extender



**3**

WRONG SIDE

CORRECT SIDE

HEX SIDE



\* OPTIONAL SPACER


If obstructed

SPACE

Place spacer as shown if there is an obstruction above or below the shower area.



**4**  
 Connect the Upper Head Assembly to main body with 4 screws

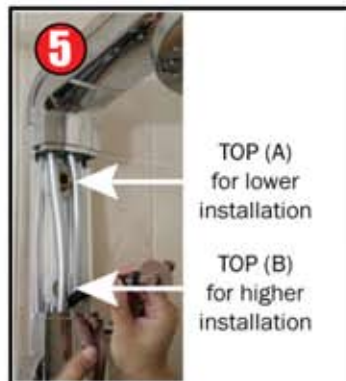

**5**

TOP (A)  
 for lower installation

TOP (B)  
 for higher installation

Adjust Aquasation height by mounting in either A or B hole



**6**

Attach and tighten Mounting Nut with special tool. (Included).



**7**  
 Place Water Line in Mounting Nut and fasten with 3 screws (screws Included).



**8**

Replace cover and attach Hand Shower (circle) to Aquasation base.



**9**

Rain Showerhead

Attach Rain Showerhead (circle) to complete Aquasation Installation. Enjoy your Aquasation

### LIMITED 5 YEAR WARRANTY

Morning Industry Inc. warrants to the original residential user of this product that it is free from defects in material and workmanship for 5 years. This warranty is void if the product has been misused, abused, altered, or abused due to harsh chemicals or the use of tools. Morning Industry Inc. will not be responsible for any labor charges incurred during the removing or replacing of the product. Morning Industry Inc. will not be responsible for any personal injury or consequential and/or incidental damages incurred. If a defect is suspected, Morning Industry Inc. will, at its sole discretion, either repair or replace any part of the product that is in question. If the product is to be sent in, the original residential user will be responsible for shipping it to our facility for repair or replacement with a \$20.00 check for shipping & handling and a copy of the receipt or proof of purchase.